User's Manual

ZM - NC3000 Series



To ensure safe and easy installation, please read the following precautions.

www.ZALMAN.com



1. Precautions

- Check the components list and condition of the product before use. If any problem is found, contact the retailer to obtain a replacement.
- Zalman Tech Co., Ltd. is not responsible for any damages due to improper product use.
- Excessive force exerted on the product may cause critical damage to the product and/or system.
- 4) To prevent damages, do not allow objects to obstruct fan rotation.
- To prevent shorting and/or damage of the fans, do not spill liquids on the unit.
- 6) Do not obstruct the air inlets.
- Use on a flat and vibration-free surface.
- Do not use in humid or dusty, under direct sunlight, or other heat sources.
- Please seal the unit airtight when storing for prolonged periods to prevent buildup in the inlets.
- Product designs and specifications may be revised without prior notification to improve quality and performance.


Disclaimer) Zalman Tech Co., Ltd. is not responsible for any damages due to external causes, including but not limited to, improper use, electrical power, accident, neglect, alteration, repair, improper installation, or improper testing.


2. Specifications

Spec.	Model	ZM-NC3000S	ZM-NC3000U
Material		Aluminum, Plastic	
Weight		1.2 Kg	1.2 Kg
Dimensions		365(L) × 400(W) × 60(H) mm	
Noise		17 ~ 23.3 dBA	
Fan	Туре	Axial Fan	
	Qty	1 ea.	
	Dimensions	Ø 220mm	
	Bearing-type	Sleeve Bearing	
	RPM	620 ~720 rpm ±10%	
Functions	Fan Power Button	0	0
	USB Port	2 ea.	4 ea. (USB Power 1ea. / USB Hub 3ea.)
	Adjustable Height	0	0
	DC In 5V	Х	0


ZALMAN

3. Components

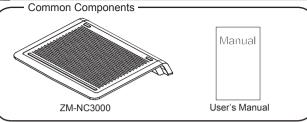


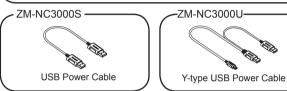


4. Functions

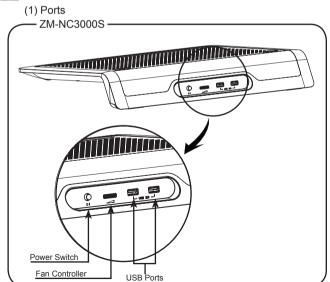


ZALMAN

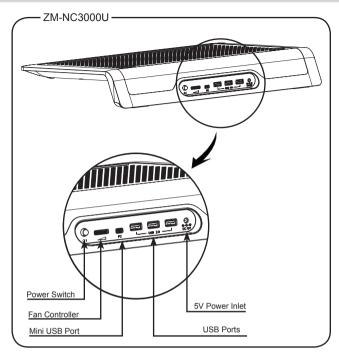

(2) Height Adjustment

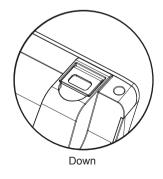


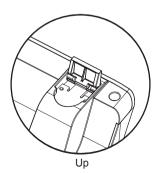



5. Recommended Use

- ZM-NC3000U -

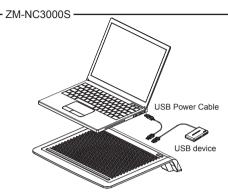

- ① Connect the Notebook PC and Cooler with the included Power Cable.
- ② Set the Notebook Cooler's Power Switch to the 'ON' position.
- ③ Use the Fan Controller to adjust the desired RPM and noise level.
- X The extra USB ports can be used to connect additional USB peripheral devices.


Y-type USB Power Cable

- ① Connect the Notebook PC and Cooler with the included Power Cable.
- ② Set the Notebook Cooler's Power Switch to the 'ON' position.
- 3 Use the Fan Controller to adjust the desired RPM and noise level.
- When using a USB hub, to ensure adequate power supply, use the Y-type USB Power Cable to connect the Notebook PC and Cooler.



▶ When using the NC3000 USB port for data transfer, use devices that draw 1.9W or less.

$Z\Lambda LM\Lambda N$

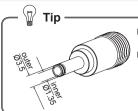

- ZM-NC3000U supports up to 5V when a USB. hub is used (adaptor sold separately).
- Adaptor Specifications Voltage: DC In 5V / Amps: 2A Adaptor connector size: see diagram

GS1000 / GS1000SE

- E-ATX / Standard ATX / microATX Compatible
- * Supports Intel Dual Xeon server motherboards
- UP to 6 Hot Swap HDD Bays
 - * GS1000(3 Standard / 3 Optional)
 - * GS1000 SE(Optional)
- Tool-Free HDD Installation Airflow Optimized Design
- · Vibration Absorbing HDD Dampers and Feet
- . The World's First Roller Rails for Smooth
- & Easy PSU Installation
- Cable Compartment Behind the Motherboard for Cable Management
- Dedicated Fan Compartment for Fanless PSU Users
- Up to a Total of 8 HDD Bays
 - * 2 Adaptors & Bezels included for use of two 5.25" bays as 3.5" Internal(HDD)/ External(FDD) Bays

GT1000

- · High-End Gaming Enclosure Built with Sturdy All Aluminum Panels
- (2 Left, 1 Right) for Easy Installation and Access to Components
- Fan Controlles, Audio Interfaces etc.
- Accommodates up to 6 Hard Drives
- Titanium (Blue LED Panel).





For more information, please visit our website.

